

CASCADE

Cream wicker is woven into a beautiful collection of curved chairs with pale grey padded seats and honey coloured Karri Gum frames. Relax in style with any piece from Cascade and enjoy the sunshine.

Ask our staff about delivery options.



FRAME/TIMBER
WICKER



FABRIC/FOAM
TEXTILENE



IDEAL FOR
SMALL SPACES



WOOD



WICKER



COVER
INCLUDED*



180 DINING TABLE*
W180 x D90 x H74cm



230 DINING TABLE*
W230 x D100 x H74cm



OUTDOOR BAR SET
Table: W150 x D85 x H100cm
Stools: W44 x D47 x H76cm



BENCH SEAT
W180 x D35 x H47cm



DINING CHAIR
W63 x D65 x H85cm



LOUNGE SET*
Single Seater: W70 x D71 x H79cm
2 Seater: W162 x D71 x H79cm
Coffee Table: W111 x D61 x H40cm



[targetfurniture.co.nz](https://www.targetfurniture.co.nz)

Nationwide Delivery | 0800 TARGET (0800 827 438)

CASCADE CARE INSTRUCTIONS

Our outdoor furniture is made with the highest quality outdoor materials however there is some maintenance required to keep the furniture looking fresh so that you can enjoy it for years to come. Here are a few things you may want to know.

BEST SUITED FOR:

Outdoor areas protected from long exposure to sun. Using umbrellas or sun-shades is an easy way to provide shade for yourself and the furniture.

BEFORE FIRST USE:

To prolong the life of wooden outdoor furniture, it is recommended to rub in an outdoor furniture oil. Available from Target or any hardware store.

AFTER EACH USE:

To keep your outdoor settings looking fresh, it is recommended to bring cushions inside and use an outdoor cover.

WINTERISING YOUR OUTDOOR FURNITURE:

If space is available, it's ideal to move your furniture into a sheltered location such as your garage. If this isn't practical, consolidate pieces into the smallest possible space, remove cushions to store indoors and cover the setting with a high quality outdoor cover. The best outdoor covers have air vents that let air circulate, preventing mould and mildew from growing.

TO CLEAN FURNITURE:

1. Remove all cushions.
2. Use a garden hose to completely wash down furniture.
3. Mix together a cleaning solution use a mild soap and lukewarm water.
4. Use a soft bristle brush to gently clean the furniture.
5. Wash it down again using the hose until all the soap is gone.
6. Air dry outside.
7. Once dry, rub in an oil specifically for outdoor furniture.

NOW AND THEN:

Regular oiling will protect the timber from the harsh outdoor environment. Every 6 months, it is recommended to re-tighten the screws, especially on dining chairs and benches.

COMPLIMENT YOUR **CASCADE** SETTING



EGO EGG CHAIR - WHITE
W100 x D110 x H195cm



HOKITIKA FLOOR RUG – ROYAL PALM CREAM/GREEN
160 x 230cm / 200 x 290cm
Huge range available, see online or in store.



IN & OUTDOOR CUSHION
Branch Stripe Taupe / Paradise Multi
50 x 50cm / 50 x 50cm
Huge range available, see online or in store.

PROTECT YOUR **CASCADE** SETTING



PREMIUM FURNITURE COVER
Available in Small/Large Rectangle, Oval, Circle or Lounge sizing.



OUTDOOR TIMBER CARE KIT